



**Timbersled Products, Inc.**  
416 Larkspur St.  
Ponderay, ID 83852

**Web Site:** [www.timbersled.com](http://www.timbersled.com)  
**E-mail:** [info@timbersled.com](mailto:info@timbersled.com)  
**Phone:** (208) 255-5644  
**Fax:** (208) 255-5924

## **Timbersled Mtn. Horse Snow Bike System**

### **Spindle Update Instructions:**


#### **Spindle Bottom Block Installation:**

1. Remove the ski bolt.
2. Remove Ski and make sure the large (taller) side of the bumper is forward. See Pic 1.
3. Remove the 2 bottom spindle bolts.
4. Rotate the spindle block 180 degrees so that it matches that shown in pic 1.
5. Replace the bolts in the spindle block.
6. Replace ski bolt.
7. Torque all 3 bolts to 50 lbs.


#### **Changing Spindle Position:**

8. Remove the fork clamp bolts.
9. Rotate the spindle until the back of the fork clamp is flush with back edge of the spindle. See pic 3.
10. Drill a 21/64" hole through the spindle, using the fork clamps as a guide.
11. Place the fork clamp cap onto the fork tube.
12. Re-Install the 5/16" x 2 1/2" long Allen bolts and nylock nuts. Do not over tighten the bolt, you can break the clamp.


**Pic. 1**

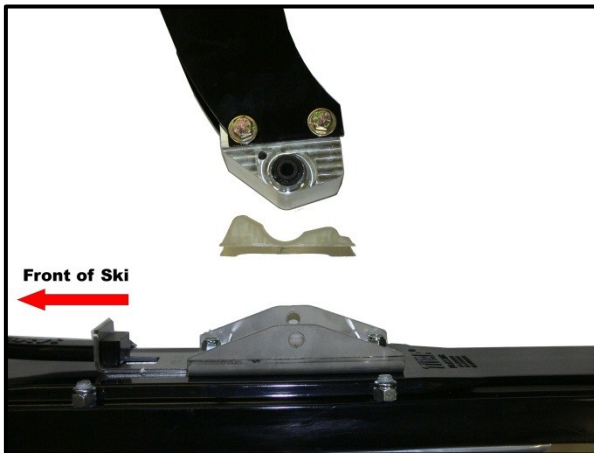

**Pic. 2**

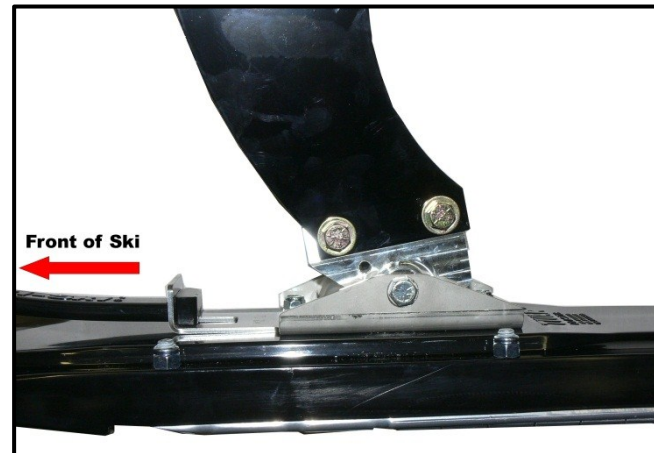

**Pic. 3**

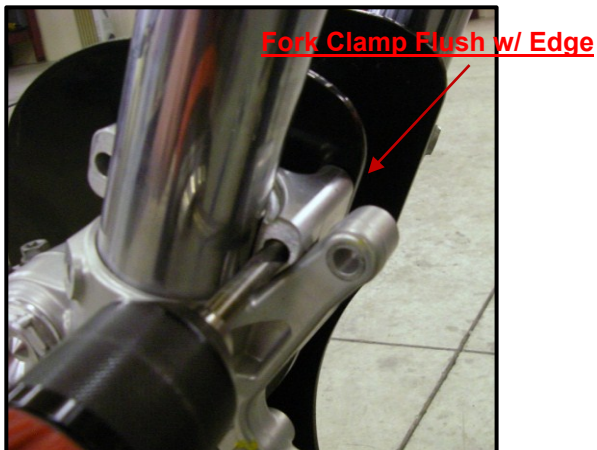

**Pic. 4**

